MIDMARK®

Installation Instructions

9A18400X Base Rail Assembly

KIT COMPONENTS

Part Number	Description	Qty.
9A184002	Base Rail Assembly	1
or		
9A184004	Base Rail Assembly w/ Welch Allyn Bracket	1
003-0657-00	Installation Instructions	1

REQUIRED TOOLS

7/16" Open end wrench or socket and ratchet
3/16" Allen wrench
Phillips head screwdriver
9/32" drill bit
Power Hand Drill

IMPORTANT INFORMATION

To provide a secure support for attachment of Midmark accessories such as 9A77 I.V. Pole, 9A78 Vision Screen and 9A83 Instrument Tray to base section.

WARNING

After positioning, always unplug power cord before working on table. Failure to comply could result in personal injury.

WARNING

Do not install 9A184 Base Rail if table is equipped with 9A228 Seat Rail. Personal injury or equipment damage could result.

INSTALLATION (1)

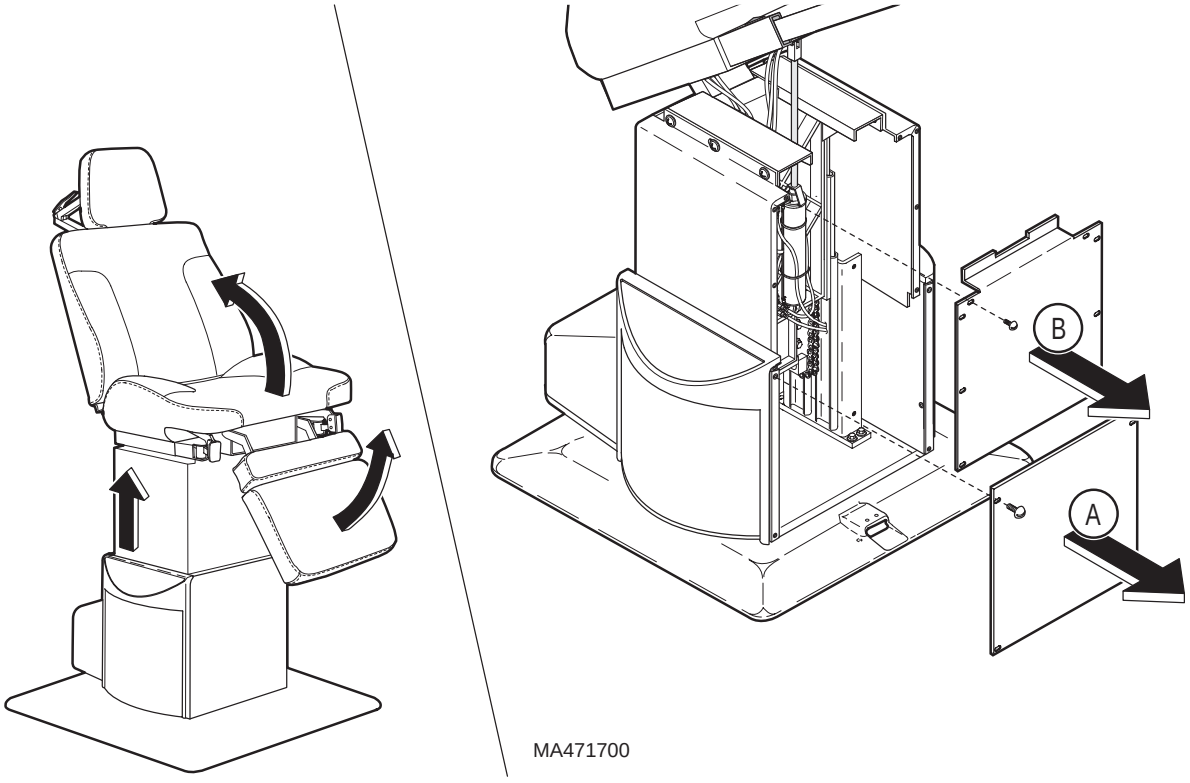

MA471700

NOTE

Adjust table to full Footrest Up, Table Up and Tilt Up positions. Unplug power cord from outlet.

A. Remove front outer shroud.
B. Remove front inner shroud.

© Midmark Corporation - 1998

INSTALLATION (2)

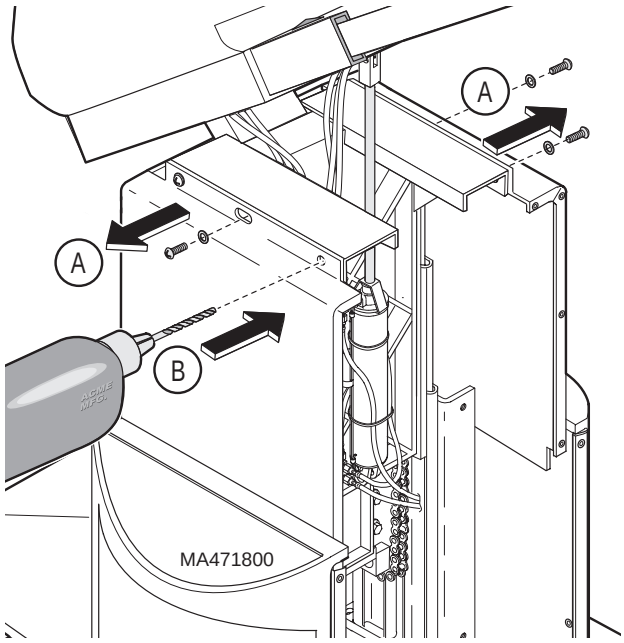

A. Remove four front mounting screws and washers that secure right and left hand inner shrouds to shroud mounting plate.

B. Using a 9/32" diameter drill bit, drill out the four holes.

INSTALLATION (3)

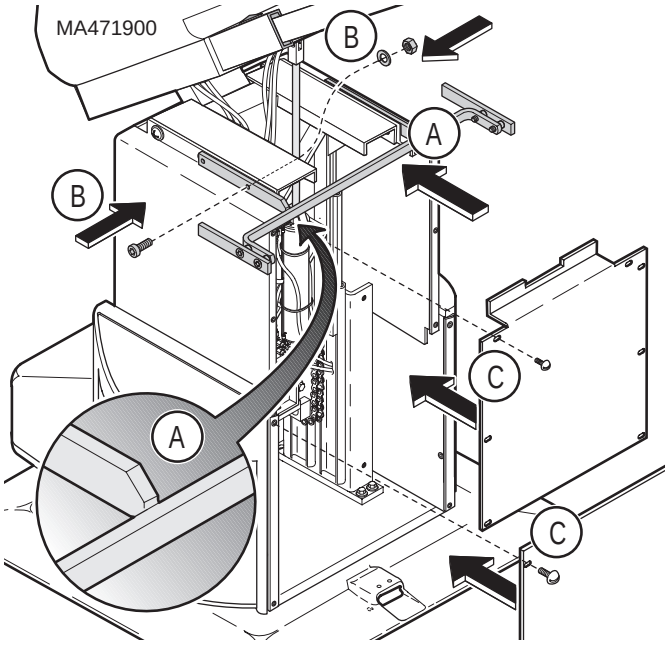

EQUIPMENT ALERT

Position base rail weldment so that tapered corners of mount are on top. Failure to do so could result in damage to equipment.

A. Place base rail weldment in position.

B. Secure base rail weldment to table with four 1/4-20 x 1" screws, lockwashers and nuts.

C. Install front inner and outer shrouds.

INSTALLATION (4)

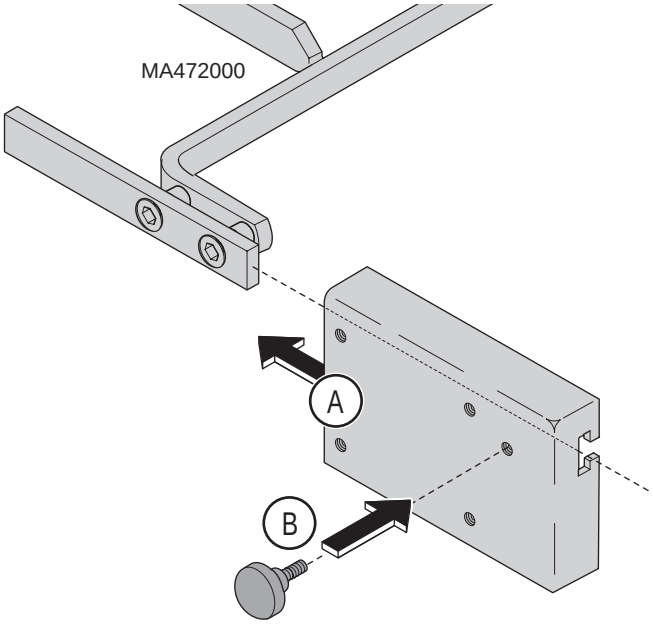

A. If kit contains a hanger for a Welch Allyn light, slide hanger on desired rail, left or right side.

B. Install and tighten knob to secure hanger to rail.

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542

003-0657-00 Rev. D (9/98)

© Midmark Corporation - 1998